

# Index

## A

- About this manual, 0-5
- Air compressor (on-board), removal, desiccant replacement and installation, 6-12
- Air filter
  - element, servicing, 1-11
  - housing, removal and installation, 4-4
- Alternator
  - drive unit and starter drive chain, removal, inspection and installation, 9-15
  - rotor and starter clutch, removal and installation, 9-14
  - stator, check, 9-14

## B

- Battery
  - electrolyte level/specific gravity, check, 1-7
  - inspection and maintenance, 9-2
  - removal, charging and installation, 9-3
- Brakes
  - caliper, removal, overhaul and installation, 7-3
  - discs, inspection, removal and installation, 7-5
  - fluid, 1-5
  - hoses, inspection and replacement, 7-9
  - light switches, check and replacement, 9-7
  - master cylinder, removal, overhaul and installation
    - front, 7-6
    - rear, 7-7
  - pads
    - replacement, 7-2
    - wear check, 1-8
  - pedal position, check and adjustment, 1-8
  - pedal, removal and installation, 7-10
  - system
    - bleeding, 7-9
    - general check, 1-8
- Brakes, wheels and tires, 7-1 through 7-16
- Buying parts, 0-7

## C

- Caliper, brake, removal, overhaul and installation, 7-3
- Camshafts, rocker arms and lash adjusters, removal, inspection and installation, 2-14
- Carburetors
  - disassembly, cleaning and inspection, 4-8
  - overhaul, general information, 4-5
  - reassembly and float level adjustment, 4-9
  - removal and installation, 4-5
  - separation and reconnection, 4-6
  - synchronization, check and adjustment, 1-14
- Centerstand and sidestand, maintenance, 8-9
- Charging system
  - testing, general information and precautions, 9-13
  - leakage and output test, 9-13
- Choke cables and throttle, removal, installation and adjustment, 4-10
- Clutch
  - check and adjustment, 1-10
  - fluid, 1-5
  - release mechanism, bleeding, removal, inspection and installation, 2-26
  - removal, inspection and installation, 2-28
  - switch, check and replacement, 9-8
- Connecting rod bearings, removal, inspection and installation, 2-46
- Cooling system, 3-1 through 3-8
  - inspection, 1-17
  - coolant, 1-6
    - reservoir, removal and installation, 3-2
    - temperature gauge and sender unit, check and replacement, 3-3
    - tubes and thermostat housing, removal and installation, 3-7
  - draining, flushing and refilling, 1-18
  - fan and thermostatic switch, check and replacement, 3-2
- Crankcase
  - breather, servicing, 1-12
  - components, inspection and servicing, 2-41
  - disassembly and reassembly, 2-39

**Crankshaft and main bearings, removal, inspection, main bearing selection and installation, 2-47**  
**Cruise valve element (1987 Aspencade), replacement, 1-18**  
**Cylinder compression, check, 1-12**  
**Cylinder head**  
 covers, removal and installation, 2-13  
 removal and installation, 2-20  
**Cylinder head and valves, disassembly, inspection and reassembly, 2-22**  
**Cylinders, inspection, 2-43**

## D

**Diagnosis, 0-17**  
**Discs, brake, inspection, removal and installation, 7-5**

## E

**Electrical system, 9-1 through 9-18**  
**Electrical troubleshooting, 9-2**  
**Emission control systems, inspection and component replacement, 4-12**  
**Engine, 1-1**  
 camshafts, rocker arms and lash adjusters, removal, inspection and installation, 2-14  
 clutch and transmission, 2-1  
 clutch  
   release mechanism, bleeding, removal, inspection and installation, 2-26  
   removal, inspection and installation, 2-28  
 connecting rod bearings, removal, inspection and installation, 2-46  
 crankcase  
   components, inspection and servicing, 2-41  
   disassembly and reassembly, 2-39  
 crankshaft and main bearings, removal, inspection, main bearing selection and installation, 2-47  
 cylinder head and valves, disassembly, inspection and reassembly, 2-22  
 cylinder head  
   covers, removal and installation, 2-13  
   removal and installation, 2-20  
 cylinders, inspection, 2-43  
 disassembly and reassembly, general information, 2-9  
 external shift mechanism, removal, inspection and installation, 2-37  
 front case cover, removal and installation, 2-35  
 guards, removal and installation, 8-4  
 initial start-up after overhaul, 2-56  
 internal shift linkage, removal, inspection and installation, 2-41  
 main and connecting rod bearings, general note, 2-46  
 main oil pump, removal, inspection and installation, 2-36  
 major engine repair, general note, 2-6  
 oil type, 1-5  
 oil/filter, change, 1-10  
 operations  
   engine in the frame, 2-6  
   engine removal, 2-6  
 output shaft, removal, inspection and installation, 2-34  
 piston  
   inspection, removal and installation, 2-44  
   rings, installation, 2-45  
 piston/connecting rod assemblies, removal, connecting rod inspection and installation, 2-42  
 primary chain and gears, removal, inspection and installation, 2-55  
 rear case cover, removal, bearing inspection and installation, 2-32  
 recommended break-in procedure, 2-57  
 removal and installation, 2-6

scavenging oil pump, removal, inspection and installation, 2-34  
 shift drum and forks, inspection, 2-51  
 timing belts, removal, inspection and installation, 2-10  
 transmission shafts  
   disassembly, inspection and reassembly, 2-52  
   shift drum and forks, removal and installation, 2-49  
   valves/valve seats/valve guides, servicing, 2-21  
**Engine/transmission oil, 1-2**  
**Evaporative emission control system (California models), check, 1-16**  
**Exhaust system**  
 check, 1-16  
 removal and installation, 4-11  
**External shift mechanism, removal, inspection and installation, 2-37**

## F

**Fairing and bodywork, 8-1 through 8-10**  
**Fairing, removal and installation, 8-6**  
 lower, front and inner covers, 8-4  
 pockets and top compartment, 8-2  
**Fasteners, check, 1-17**  
**Fault finding, 0-17**  
**Fender, removal and installation,**  
 front, 8-3  
 rear, 8-9  
**Final drive**  
 oil  
   change, 1-18  
   type, 1-6  
 unit, removal, inspection and installation, 6-14  
**Fluid levels, check, 1-5**  
**Footrests, removal and installation, 8-3**  
**Forks**  
 oil change, 6-3  
 removal and installation, 6-3  
**Frame, inspection and repair, 8-9**  
**Front brake master cylinder, removal, overhaul and installation, 7-6**  
**Front case cover, removal and installation, 2-35**  
**Front fender, removal and installation, 8-3**  
**Front wheel, removal, inspection and installation, 7-11**  
**Fuel and exhaust systems, 4-1 through 4-14**  
**Fuel system**  
 check and filter replacement, 1-15  
 pump, testing, removal and installation, 4-3  
 tank  
   cleaning and repair, 4-3  
   removal and installation, 4-2  
**Fuses, check and replacement, 9-3**

## G

**Gauges and meters, check, 9-11**  
**Gear position switch (gearshift sensor), check, removal and installation, 9-10**

## H

**Handlebar**  
 removal and installation, 6-2  
 switches  
   check, 9-8  
   removal and installation, 9-8

**Headlight**

- aim, check and adjust, 1-18, 9-6
- bulb, replacement, 9-4

**Honda GL1200 Gold Wing, 0-5****Horn, check and replacement, 9-10****Hoses, brake, inspection and replacement, 7-9****I****Identification numbers, 0-6****Idle fuel/air mixture adjustment, 4-4****Idle speed, check and adjustment, 1-14****Ignition system, 5-1 through 5-4**

- check, 5-2
- coils, check, removal and installation, 5-2
- control unit, check, removal and installation, 5-4
- main (key) switch, check and replacement, 9-9

**Initial start-up after overhaul, 2-56****Instrument and warning light bulbs, replacement, 9-12****Instrument cluster, removal and installation, 9-11****Internal shift linkage, removal, inspection and installation, 2-41****Introduction to tune-up and routine maintenance, 1-2****L****Lighting system**

- check, 9-4
- switches, brakes, check and replacement, 9-7

**Lubrication, general, 1-15****M****Main and connecting rod bearings, general note, 2-46****Main oil pump, removal, inspection and installation, 2-36****Maintenance techniques, tools and working facilities, 0-8****Major engine repair, general note, 2-6****Meters and gauges, check, 9-11****Mirrors, removal and installation, 8-5****Motorcycle chemicals and lubricants, 0-16****O****Oil change**

- engine, 1-10
- final drive, 1-18
- forks, 6-3

**Oil pressure switch, removal, check and installation, 9-9****On-board air compressor, removal, desiccant replacement and installation, 6-12****On-board compressor system check and element cleaning, 1-16****Operations**

- engine in the frame, 2-6
- requiring engine removal, 2-6

**Output shaft, removal, inspection and installation, 2-34****P****Pedal, brake, removal and installation, 7-10****Piston**

- rings, installation, 2-45
- inspection, removal and installation, 2-44

**Piston/connecting rod assemblies, removal, connecting rod inspection and installation, 2-42****Primary chain and gears, removal, inspection and installation, 2-55****Pulse air system, inspection, 1-11****Pulse generators, check, removal and installation, 5-3****R****Radiator**

- cap, check, 3-2
- removal and installation, 3-4

**Radio and speakers, removal, check and installation, 9-17****Rear brake master cylinder, removal, overhaul and installation, 7-7****Rear case cover, removal, bearing inspection and installation, 2-32****Rear fender, removal and installation, 8-9****Rear shock absorbers, removal, inspection and installation, 6-11****Rear wheel, removal, inspection and installation, 7-12****Recommended break-in procedure, 2-57****Recommended lubricants and fluids, 1-2****Regulator/rectifier, check and replacement, 9-13****Routine maintenance intervals, 1-4****S****Saddlebag**

- bracket and trunk, removal and installation, 8-8
- removal and installation, 8-7

**Safety, 0-14****Scavenging oil pump, removal, inspection and installation, 2-34****Seat, removal and installation, 8-2****Shift drum and forks, inspection, 2-51****Shock absorbers, rear, removal, inspection and installation, 6-11****Side covers, removal and installation, 8-5****Sidestand and centerstand, maintenance, 8-9****Spark plugs**

- replacement, 1-13
- type, 1-1

**Speakers and radio, removal, check and installation, 9-17****Specifications, general, 0-7****Speed sensor (Aspencade), removal, check and installation, 9-10****Speedometer cable (Standard and Interstate) removal and installation, 9-10****Starter system**

- alternator drive unit and starter drive chain, removal, inspection and installation, 9-15
- alternator rotor and starter clutch, removal and installation, 9-14
- motor, removal and installation, 9-12
- relay, check and replacement, 9-12

**Steering head bearings**

- adjustment and lubrication, 6-8
- check, 1-16
- replacement, 6-9

**Steering, suspension and final drive, 6-1 through 6-18****Suspension, check, 1-17****Swingarm**

- bearings
  - check, 6-16
  - replacement, 6-18
- removal and installation, 6-16

**T****Taillight bulbs and turn signals, replacement, 9-6****Thermostat, removal, check and installation, 3-4**

**Throttle and choke**

- cables, removal, installation and adjustment, 4-10
- operation and freeplay, check and adjustment, 1-9

**Timing belts, removal, inspection and installation, 2-10****Tires**

- tubeless, general information, 7-16
- wheels, general check, 1-9

**Tools, 0-9****Transmission shafts**

- disassembly, inspection and reassembly, 2-52
- shift drum and forks, removal and installation, 2-49

**Troubleshooting, 0-17****Trunk and saddlebag bracket, removal and installation, 8-8****Trunk, removal and installation, 8-8****Tubeless tires, general information, 7-16****Tune-up and routine maintenance, 1-1 through 1-18****Turn signal circuit, check, 9-7****Turn signals and taillight bulbs, replacement, 9-6****V****Valves/valve seats/valve guides, servicing, 2-21****W****Water pump, check, removal, disassembly, inspection and installation, 3-5****Wheel**

- alignment check, 7-10
- bearings, replacement, 7-13
- inspection and repair, 7-10
- removal, inspection and installation
  - front, 7-11
  - rear, 7-12

**Windshield, removal and installation, 8-5****Wiring diagrams, 9-18****Working facilities, 0-13**